


# TOTAL VIEW

- |                                    |                                          |
|------------------------------------|------------------------------------------|
| <b>A</b> Label Roll Cover          | <b>F</b> Print-Head                      |
| <b>B</b> Label Roll                | <b>G</b> Screw for print head adjustment |
| <b>C</b> Knob                      | <b>H</b> Ink Roller Holder               |
| <b>D</b> Base Plate                | <b>L</b> Inner Base Plate                |
| <b>E</b> Rounded end of base plate | <b>M</b> Handle                          |

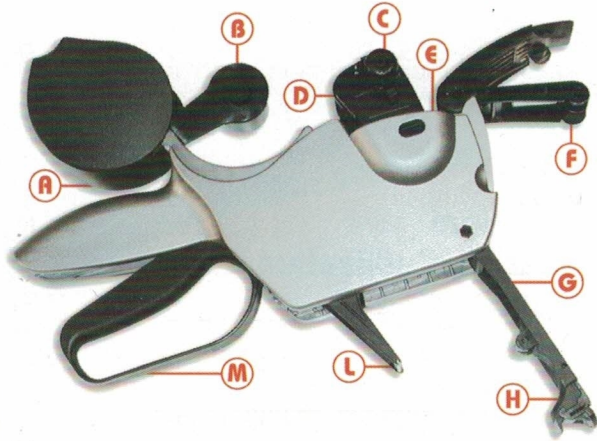

## English

- 1) OPEN THE LABEL ROLL COVER (A).
- 2) RELEASE THE LABEL ROLL (B)
- 3) OPEN THE BASE PLATE (G) AND PUSH IT OUTWARDS AS SUGGESTED (H)
- 4) INSERT THE LABEL ROLL INTO THE LABEL ROLL HOLDER (B) AND MAKE IT SLIDE INTO THE COVER (A) AND THROUGH THE MACHINE WITH THE LABELS FACING UPWARDS.
- 5) CLOSE THE LABEL ROLL COVER (A)
- 6) STRETCH THE LABEL ROLL FOR ABOUT 10 CMS. CLOSE THE SMALL BASE PLATE (L) AND THE BASE PLATE (G), KEEPING THE PAPER AT THE CENTER OF THE LABELLER GUIDE.
- 7) TO ADJUST THE PRINT ON THE LABEL, SLACK THE SCREWS (E) AND MOVE THE PRINT HEAD (D) TOWARDS AND BACKWARDS. THEN RE-TIGHTEN THE SCREWS (E) IN ORDER TO FIX THE PRINT HEAD (D).
- 8) TO LOCATE THE INDICATOR ON THE BAND, MOVE THE DIAL KNOB (C) AND SELECT THE REQUIRED DIGIT; THEN PUSH IT BACK INTO PLACE.
- 9) OPEN THE INK ROLLER HOLDER (B) BY PUSHING IT OUTWARDS.
- 10) REPLACE THE INK ROLLER (F) BY PRESSING GENTLY AS INDICATED BY THE ARROW.

